

Home Product Import GmbH Graf - Zeppelin - Str. 5 D - 46149 Oberhausen Germany	Tel. : +49-(0)208-9949330 Fax.: +49-(0)208-99493930 e-mail: info@h-p-i.de
---	---

LEDs Removal Instructions for LED Luminaire LED 燈具的 LEDs 拆卸說明 / LED 燈具的 LEDs 拆卸說明
--

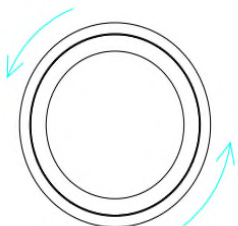
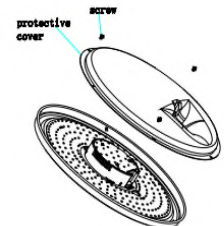
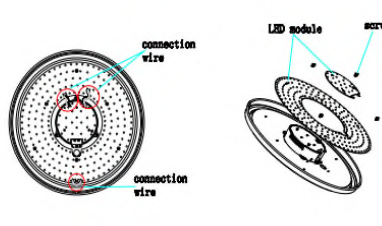
HPI Article Nr. (HPI 产品编号):	ERA	Date (日期):	2021.9.8
HPI Model Name (HPI 型号名称):	180.004338 180.004339	Revision Date	
Vendor Name (供应商名称):		(修订日期):	
Vendor Item Nr. (供应商产品编号):	CL-LED-UFO-R001 RM 30W	Version Nr. (版本号):	1

Procedure how to remove the LEDs from the luminaire (in text form):
 如何從燈具中移除 LED 的程序 (以文本形式) / 如何从灯具中移除 LED 的程序 (以文本形式) :

Step 1 步驟/步骤 1	Rotate the lampshade anti-clockwise to release the lampshade from the luminary plate
Step 2 步驟/步骤 2	Use a corss screwdriver,loosen the screw on the luminiare , remove the protective cover.
Step 3 步驟/步骤 3	Use a cross screwdriver, loosen the screw on the luminiare plate
Step 4 步驟/步骤 4	
Step 5 步驟/步骤 5	
Step 6 步驟/步骤 6	
Step 7 步驟/步骤 7	
Step 8 步驟/步骤 8	
Step 9 步驟/步骤 9	
Step 10 步驟/步骤 10	

Drawings of how to remove the LEDs from the luminaire (without damaging the luminaire itself) corresponding to the above steps.

與上述步驟對應的如何從燈具中移除 LED（不損壞燈具本身）的圖示
 与上述步骤对应的如何从灯具中移除 LED（不损坏灯具本身）的图式

 <p>Step 1: remove the lampshade.</p>	 <p>Step 2: use a cross screwdriver, loosen the screw, remove the protective cover.</p>	 <p>Step 3: use a cross screwdriver, loosen the screw, remove the bad LED module and replace the new one; tighten the screw.</p>
--	--	--

Prepared By (准备个人姓名):	Joanne Xu
Jon Title (职称):	Sales representative
Company Name (公司名称):	

Signature with Company Chop
 (负责人签字加公司印章):