


Montageanleitung & erhältliche Ersatzteile


Assembly instruction & Spare parts available to order

Instruction de montage & Pièces de rechange disponibles



kela

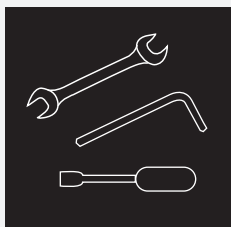

D	Montageanleitung
GB	Assembly instructions
F	Instructions de montage
E	Instrucciones de montaje
P	Manual de montagem
I	Istruzioni di montaggio
NL	Montagehandleiding
FIN	Asennusohje
GR	Οδηγίες συναρμολόγησης
TK	Montaj talimatı
AR	بيكرتلا لي لرد
RU	Инструкция по монтажу
PL	Instrukcja montażu
CZ	Návod k montáži
SK	Návod na montáž
SLO	Navodila za montažo
HR	Upute za ugradnju
RO	Instrucțiuni de montaj
BG	Монтажна инструкция

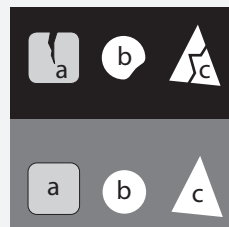


D	Erhältliche Ersatzteile
GB	Spare parts available to order
F	Pièces de rechange disponibles
E	Piezas de repuesto adquiribles
P	Peças sobressalentes encomendáveis
I	Pezzi di ricambio ordinabili
NL	Beschikbare vervangende onderdelen
FIN	Saatavana olevat varaosat
GR	Παρεχόμενα ανταλλακτικά
TK	Temin edilebilen yedek parçalar
AR	ذرفوتملرا راي غلا عطق
RU	Имеющиеся в продаже запасные части
PL	Części zamienne do nabycia
CZ	Dostupné náhradní díly
SK	Dostupné náhradné diely
SLO	Nadomestni deli, ki so na voljo
HR	Dobavljivi zamjenski dijelovi
RO	Piese de schimb accesibile
BG	Резервни части, които можете да закупите

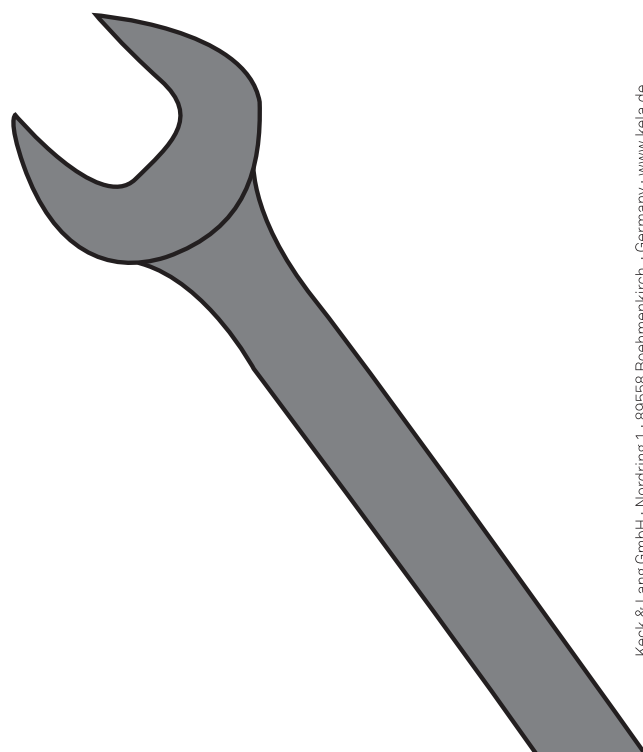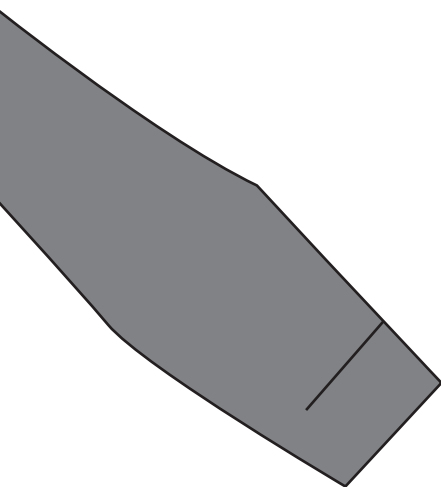


kela




18002

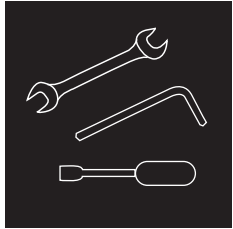

A		x1
B		x1
C		x1
D		x1
E		x1
F1		x1
F2		x1
G		x2
H		x2

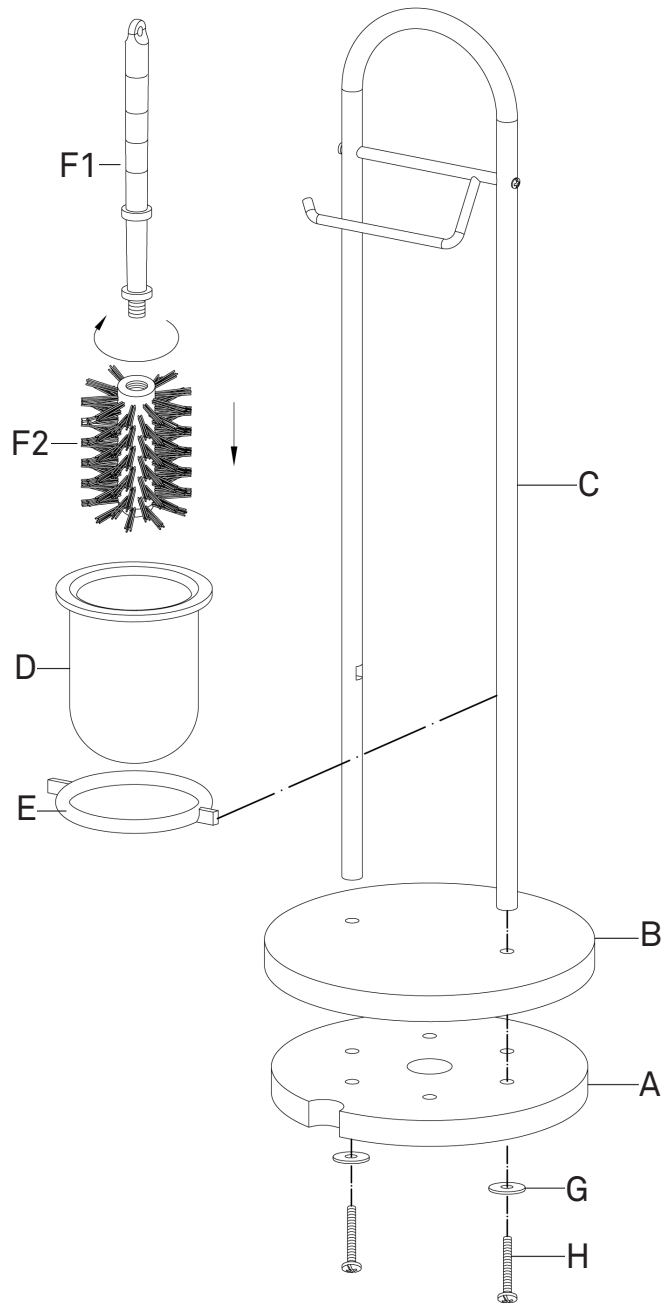

2201

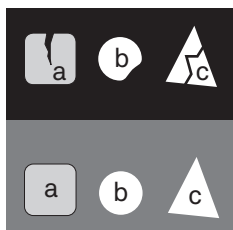

8180154
2x G
2x H

8180013
1x D

8180014
1x E

18963
1x F1
1x F2

18965
1x F1
1x F2